

## Initiating remote control












 




Call switching box    2-3 rings    Internal MoH    Switching box code    Internal MoH





## Switching the call variant


...  

 3 = night service  
 4 = call forwarding




 1 = on  
 0 = off  
 2 = all off  
 3 = all on

(  Phone-number  )
 




## Switching door call variant 2 (night)

...   

 4 = off  
 5 = on





 Door phone number







## Room monitoring

...  Guarding telephone
 


 




## Relay switching

...  

 Internal phone number of the relay


 

 
 
 


 


 1 = on  
 0 = off

## Door call diversion

... \* 5 8 1  1 = extern.  
 3 = abbrev. number  Door phone number  Destination  


 

 
 

 

 


## Diversion to - on

... \* 5 8  1 = permanent  
 2 = busy  1 = extern.  
 3 = no answer  2 = intern.  
 3 = abbrev. No.  Internal phone number  Destination  

## Diversion to - off / door call diversion off

... \* 5 8 0  Internal phone number / door phone number  

## ISDN call forwarding

... \* 6  3 = permanent  
 4 = busy  1 = extern.  
 5 = no answer  3 = abbrev. number  Phone-number   Destination   

## ISDN call forwarding off

... \* 6 3 0  Phone-number   